### Fence Panel Kit


1 x Post Base, 4 x post base bolts & 2 cross bolts, 12 x fence boards, 2 x fixing clips & 1 x Post, 1 x Post Cap, 2 x decorative cover inserts, 1x top rail cover, 1 x base rail

Post Kit 1 x Post, 1 x Post Cap, 2 x decorative cover inserts, 1 x post base, 4 x post base bolts & 2 cross bolts.


### INSTALLATION OF POST BASE

### Concrete foundation

post base. 1. Bolt the post base on a flat strong concrete foundation. It is recommended to space 1800mm apart between 2 post bases, then mark the hole site of the

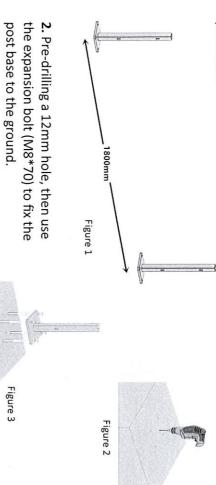


- 1. Insert the post into the post base as shown in the figure 4.
- the post (shown in the figure 5). Using small wrench. When the post reaches the bottom of the post base, fix the bolt M5\*50 to

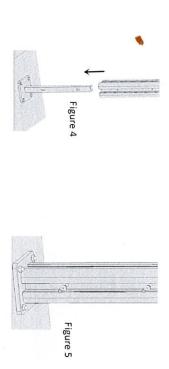

### **INSTALLATION OF BOTTOM FRAME**

post as shown in the figure 6. Insert the bottom frame into the groove of the



bottom, the other fence boards can be installed one by one. Insert the first fence board into the groove of two posts and slide it to the (12 fence boards). (Figure 7 & 8)

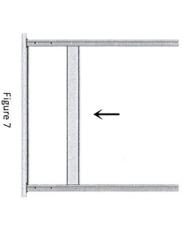
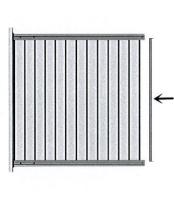




Figure 8

### **INSTALLATION OF TOP FRAME**

Fix the top frame on the top fence board by the bolt M 5\*50. (Figure 9 & 10)



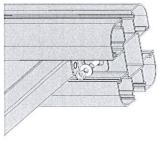


Figure 10

Figure 9

# ALUMINIUM POST SIDE COVER and CAP INSTALLATION

Insert the post side cover from the top of post rebate to the bottom of the post, a small suitable size of post side cover can be insert if it's need to cover the gap of post cap and top frame, at last, insert the post cap to the post as shown in the figure 11 and figure 12.

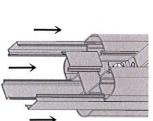


Figure 11

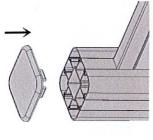


Figure 12

## COMPLETE THE FENCE INSTALLATION

The WPC Fence appearance result as shown the figure 13



Figure 13



## Maintenance Free Garden Fencing

